

10" DEEP BOWL OPTIMAL WORKSPACE

VERSATILE MULTIPLE REVEAL & INSTALLATION ALTERNATIVES



Positive Reveal

The sink's edge extends 3/8 of an inch past the countertop. The sink's rim is exposed.




Zero Reveal / Flush-Mount

The sink edge is completely flush with the countertop. The sink rim is covered.



Negative Reveal

Countertop extends past the sink's edges by 1/8 of an inch and overlaps the sink rim.

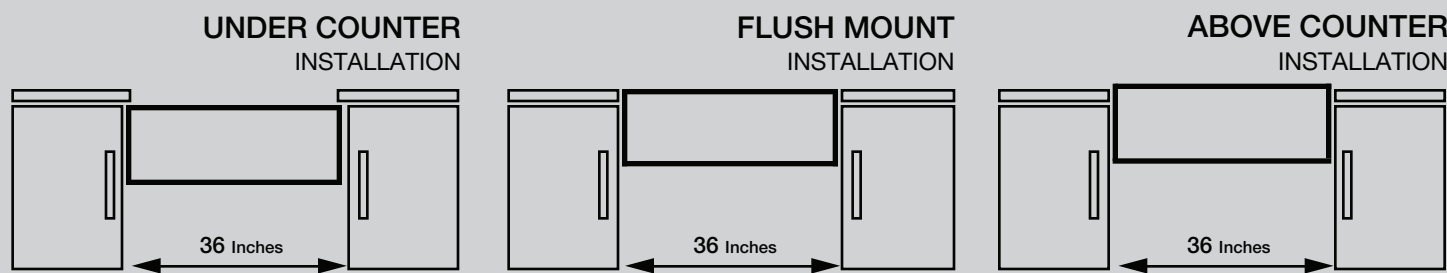

Structurally Sound Cabinet Base

Farmhouse sinks require sink base cabinets with an open front to accommodate a 10" deep sink. Additional structural supports on the inside frame of the sink base cabinet is required. The structural supports must support the weight of the sink and any attachments such as garbage disposals.

When lowering the sink onto the cabinet support, ensure that the top of the sink is evenly flush against the bottom of the countertop. Allowances should be made for the water supply line, drains and garbage disposal.

Specialty installation to stone, marble, granite or butcher block require the services of a countertop fabricator.

All sink installation configurations require allowance for faucet installation. Sufficient clearance should be made for both a faucet and backsplash.

Determine the Reveal

Before installation define the cut area with a easily erasable writing implement. Determine the reveal best suited for your undermount application. Also take into account the front extension of the sink when preparing for installation.

Apply Sealant

As required apply clean lines of sealant to act as a gasket between the sink and the cabinet base.

A Clean Installation

Clean both the bottom of the countertop and the rim of the sink with denatured alcohol. Carefully apply beads of silicone around the rim of the sink. Lower the countertop onto the sink. Remove all excess silicone sealant with a suitable cleaner.

